Manley Clock Instructions

Before you start make sure...

- Time of Day Control is on 'Scoreboard'
- Count switch is in 'Down' position
- Main Time switch is in 'Run' position
- Penalty switch is in 'Run' position

Set Time for Warm-up

- Hold Main Time **button**
- Enter 3 0 0 (this will set the clock for a 3-minute warm-up
- Turn Main Time **switch** to 'Run' position
- When buzzer goes, turn Main Time switch to 'Hold' position

Set Time for Period

- Hold Main Time **button** (on top row)
- Enter applicable period time (i.e. 1 0 0 0 for 10 minutes. / 1 2 0 0 for 12 minutes etc.)
- Turn Main Time **switch** to '**Run**' position when the game starts
- Turn Main Time <u>switch</u> to 'Hold' position whenever the whistle blows (make sure you turn it back into 'Run' position when game resumes)
- At the end of period, turn Main Time switch into 'Hold' position

Enter Scores

- Hold Home or Guest/Visitor Score button
- Enter "1" for the 1st goal / Enter "2" for 2nd goal, etc.

Setting Penalties

- Hold **Home** or **Guest/Visitor** Penalty 1 **button**
- Enter number of minutes assessed (i.e. 2 0 0 for 2 minutes / 5 0 0 for 5 minutes etc)
- Release **button**
- For a 2nd penalty that occurs before the 1st penalty expires
 - Hold **Home** or **Guest/Visitor** 2 **button**
 - Enter number of minutes assessed (i.e. 2 0 0 for 2 minutes)
 - Release <u>button</u>

Clearing Penalties

- Hold Home or Guest/Visitor Penalty <u>button</u>
- Enter 0

Notes:

- 1. Occasionally, the Manley Clock buzzer goes off for no reason. Stay calm. Don't do anything. It will stop on its own. Ignore any strange looks you get.
- 2. The period button does not work so don't bother trying to enter it.